 


SERVICE TIPS

DIFFICULTY LEVEL - 2



5 to 10 Min

Before working - always follow all instructions and warnings described in the Operator's Manuals for this mower.

NOTICE:

If you are unsure of how to use these instructions please contact us by e-mail: service@ybravo.com or by phone: 1.888.ybravo.1 (1.888.927.2861)

Tools needed:

- 1 pcs 10mm wrench
- 1 pcs 13mm wrench

Alternatively (better)

- 1 pcs 10mm socket
- 1 pcs 13mm socket




STEP 1

Always remove the ignition cable from the spark plug before performing any service work!




STEP 2

Remove the 13mm nut and the 10mm hex screw for the belt guard as illustrated.

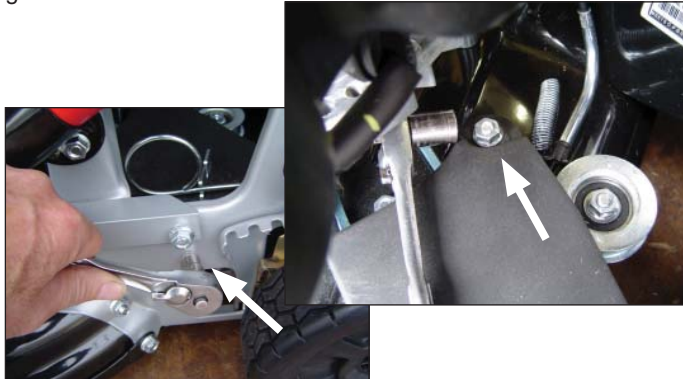


Pull the shift lever towards the "LO" speed setting of the transmission. Rotate the cover clockwise for removal.

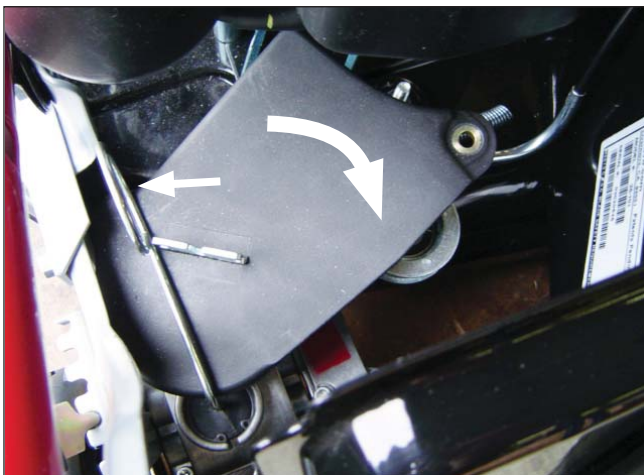


STEP 3

Slide the belt off the transmission pulley past the belt guide.

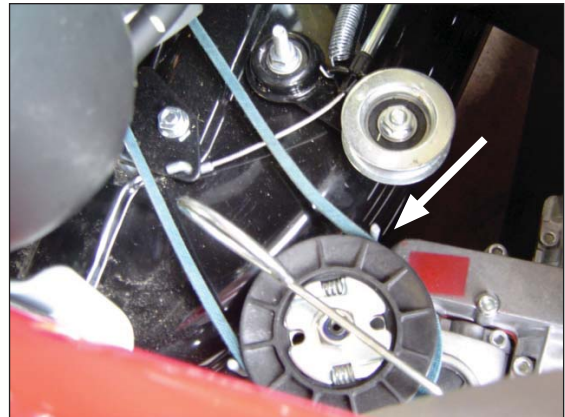

STEP 4

Pull out the belt under the deck as illustrated.

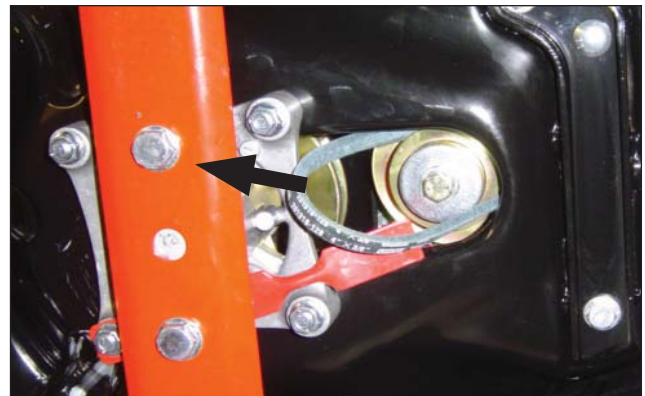

STEP 5 Assembly

Make sure that the belt is properly in place by both engine and transmission belt guides (1). Make sure the return spring (2) is in place and that the belt tensioning arm is moving freely.

Note: If the belt tension arm is not moving freely it can leave some tension on the drive belt, causing an intermittent difficulty of pulling back on the mower during normal mowing operation.

