 


### SERVICE TIPS

Updated: 9/2012

DIFFICULTY LEVEL - 3



10 to 15 Min

**Before working** - always follow all instructions and warnings described in the Operator's Manuals for this mower.

#### NOTICE:


If you are unsure of how to use these instructions please contact us by e-mail: [service@ybravo.com](mailto:service@ybravo.com) or by phone: 1.888.ybravo.1 (1.888.927.2861)

#### Tools needed:

- 1 pcs 10mm wrench
- 2 pcs 13mm wrench
- 1 pair Needle Nose Pliers

#### Alternatively (better)

- 1 pcs 10mm socket
- 1 pcs 13mm socket

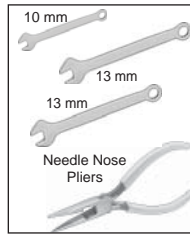

#### STEP 1

Always remove the ignition cable from the spark plug before performing any service work!



#### STEP 2


Remove the 13mm nut and the 10mm hex screw for the belt guard as illustrated.



Pull the shift lever towards the "LO" speed setting of the transmission. Rotate the cover clockwise for removal.


#### STEP 3

Remove the nut that holds the belt tension arm (1). Also unhook the return spring and drive cable with a pair of pliers (2).

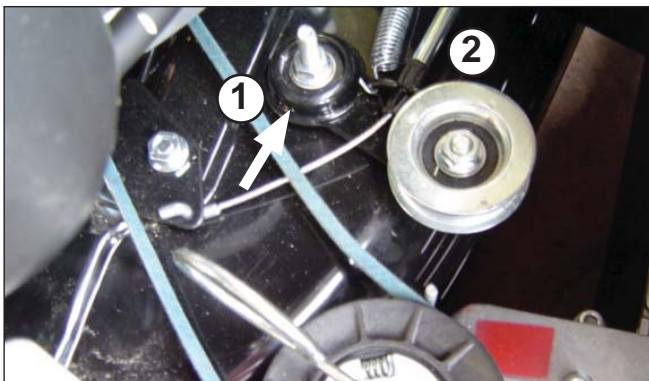

#### STEP 4

Remove the pulley from the old arm and install on the new arm. Use the original steel bushings and install the arm as illustrated.

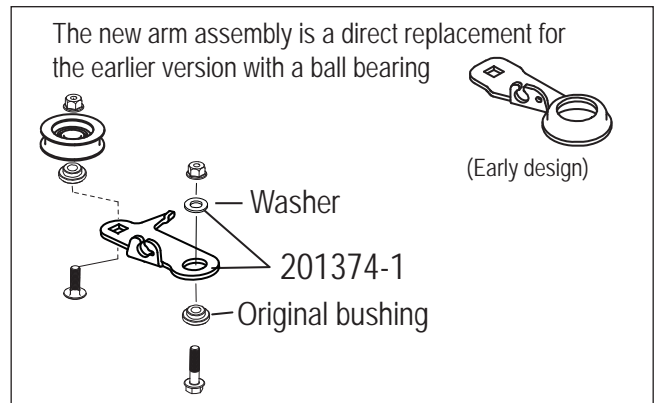

#### STEP 5

Make sure that the belt is properly in place by both engine and transmission belt guides (1). Make sure the return spring (2) is in place and that the belt tensioning arm is moving freely. Note the proper position of the cable "Z" fitting installed on the belt guide (3).

