 


DIFFICULTY LEVEL - 3




10 to 15 Min

Before working - always follow all instructions and warnings described in the Operator's Manuals for this mower.

NOTICE:

If you are unsure of how to use these instructions please contact us by e-mail: service@ybravo.com or by phone: 1.888.ybravo.1 (1.888.927.2861)

Tools needed:
2 pcs 10mm wrenches
Measuring devise - preferably a caliper

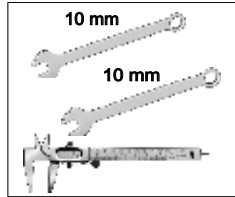

If a BBC cable is replaced or work is performed to the BBC system on the Bravo 21 and the Bravo 25 mowers it is important to adjust the cable tension correctly. Failure to adjust the cable correctly can cause damage or a complete malfunction of the BBC system. A malfunction can cause serious injury. ALWAYS refer to the Operator's Manual for the testing of the BBC function.

This instruction assumes that the BBC cable is properly in place and that the BBC control on the handle is in operational condition and not damaged or broken.

STEP 1

Remove the cover at the BBC under the deck on the Bravo 21 or the cover in the front of the engine on the Bravo 25.




STEP 2

Make a measurement of the length of the spring without any tension on the cable. The total length is typically approximately 2 inches.



STEP 3

Engage the BBC control and block the upper bail from releasing the brake again.

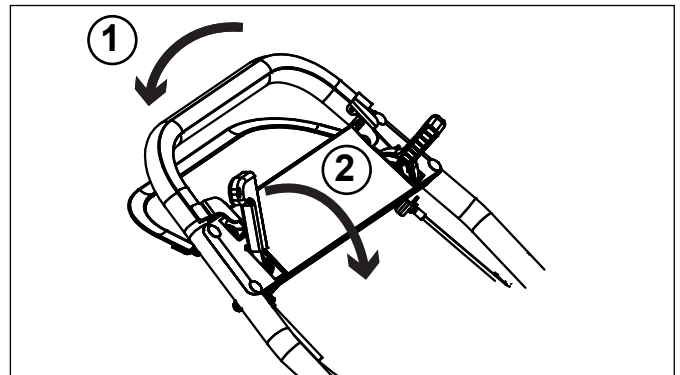

STEP 4

The stretched out length of the spring should now measure a minimum of **1/4 inch to 3/8 inch more** than the first measurement. If necessary make adjustment with the adjustment screws on the cable. Note that on the Bravo 21 mower you first loosen the clamp (1) and then adjust the nut on the cable.

