 


SERVICE TIPS

DIFFICULTY LEVEL - 2




5 to 10 Min

Before working - always follow all instructions and warnings described in the Operator's Manuals for this mower.

NOTICE:


If you are unsure of how to use these instructions please contact us by e-mail: service@ybravo.com or by phone: 1.888.ybravo.1 (1.888.927.2861)

Tools needed:
2 pcs 10mm wrenches
Philips screwdriver

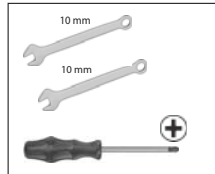


STEP 1

Remove the three - 10 mm nuts and screws as illustrated. Also loosen the fourth nut - but do not remove.

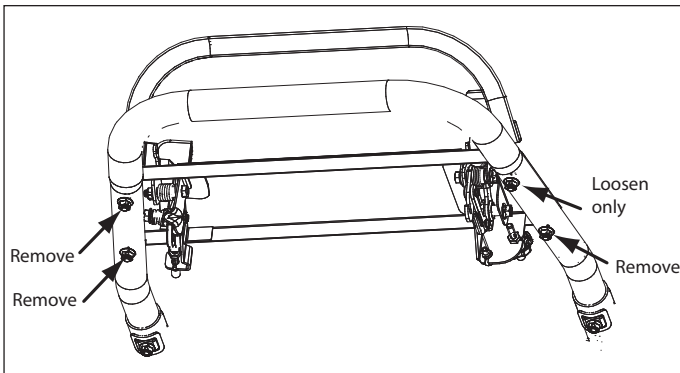


STEP 2

By lifting the control panel it allows access to the screw for the throttle lever. Remove the screw, the spring and bushing.

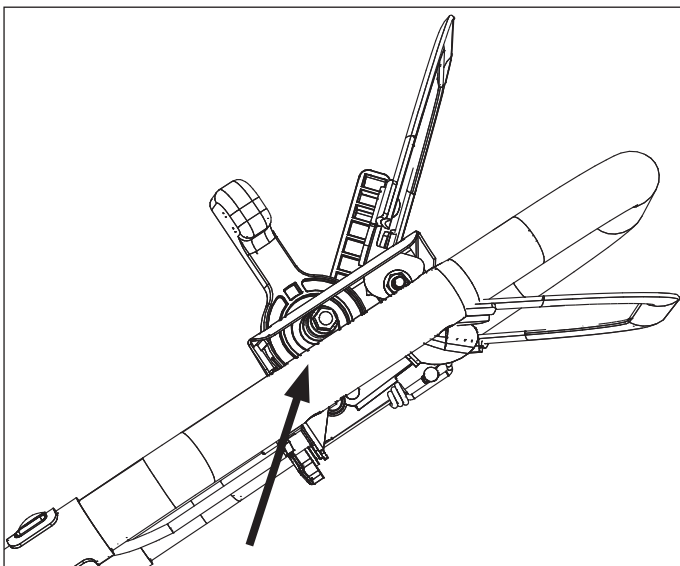

STEP 3


Pull up on the throttle lever and remove the throttle cable from the eyelet of the lever.

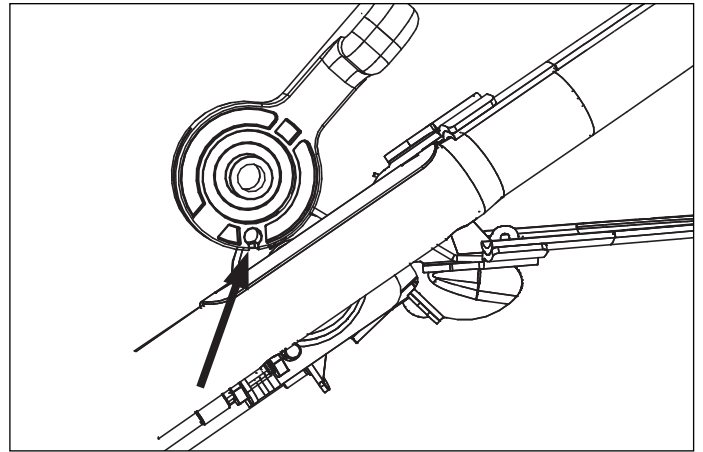


STEP 4

Reassemble the parts in reverse order. Verify that the throttle cable is adjusted properly.

- Move the throttle lever to the **Full Throttle** position.

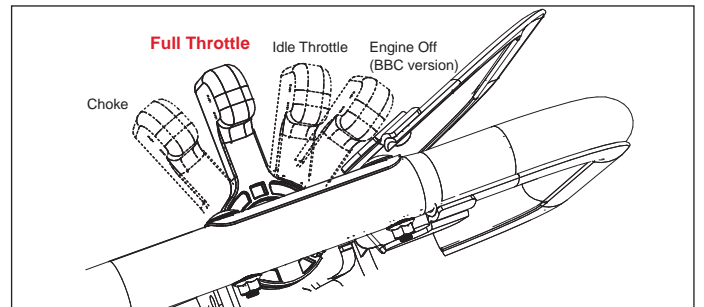

- In the full throttle position the two arms at the throttle mechanism on the engine should touch as illustrated below.

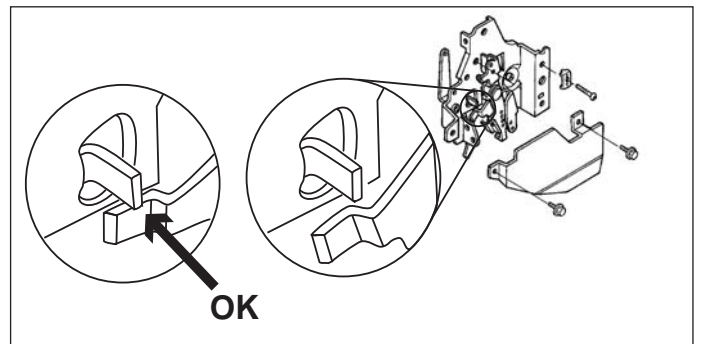

STEP 5

Start the engine and test the function of the throttle control system.